

Насосы-дозаторы серии HS

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: cxi@nt-rt.ru || сайт: <https://cixi.nt-rt.ru/>

High Speed Liquid Metering Pump Gear Pump Dosing pump

The gear metering pump is a pair of intermeshing gears, one of which is a driving gear and the other is a driven gear that is driven to rotate by the driving gear. The housing has a small gap.


when the gear rotates, in the liquid suction chamber where the gear teeth gradually disengage the sealed volume between the teeth increases, forming a partial vacuum, and the liquid is sucked

into the liquid suction chamber under the pressure difference. The gear rotates, and the liquid is driven by the gear between the gear and the casing to be sent to the discharge chamber.

In the discharge chamber, the two gears gradually mesh, the volume is reduced, and the liquid between the gears is squeezed to the liquid discharge port. Each time the gear rotates, the volume of the discharged liquid is constant, and the flow rate of the gear metering pump is obtained by measuring the rotation speed of the gear metering pump.



Model	Flow L/H	Inlet	Pump size L (mm)	Pump Size B (mm)	Pump size C (mm)	KW、REV r/min	Pressure MPa	Material
HS-5	120	G1/2	191.60	43.25	46.25	0.55、910	0.6	304 316 316L 2205
						0.75、925	1.0	
						1.1、930	1.6	
HS-8	210	G1/2	195.60	43.25	52.25	0.55、910	0.6	
						0.75、925	1.0	
						1.1、930	1.6	
HS-15	300	G1/2	199.60	43.25	54.25	0.55、910	0.6	
						0.75、925	1.0	
						1.1、930	1.6	
HS-20	420	G1/2	207.60	43.25	62.25	0.55、910	0.6	
						0.75、925	1.0	
						1.1、930	1.6	
HS-30-1	540	G1/2	212.60	43.25	67.25	0.55、910	0.6	
						0.75、925	1.0	
						1.1、930	1.6	
HS-30-2	600	G3/4	217.10	79.50	35.50	0.75、925	1.0	
						1.1、930	1.6	
HS-30-L	900	G3/4	232.10	87	43	0.75、925	1.0	
						1.1、930	1.6	
HS-40	1200	G3/4	/	/	/	1.1、930	1.0	
						1.5、940	1.6	

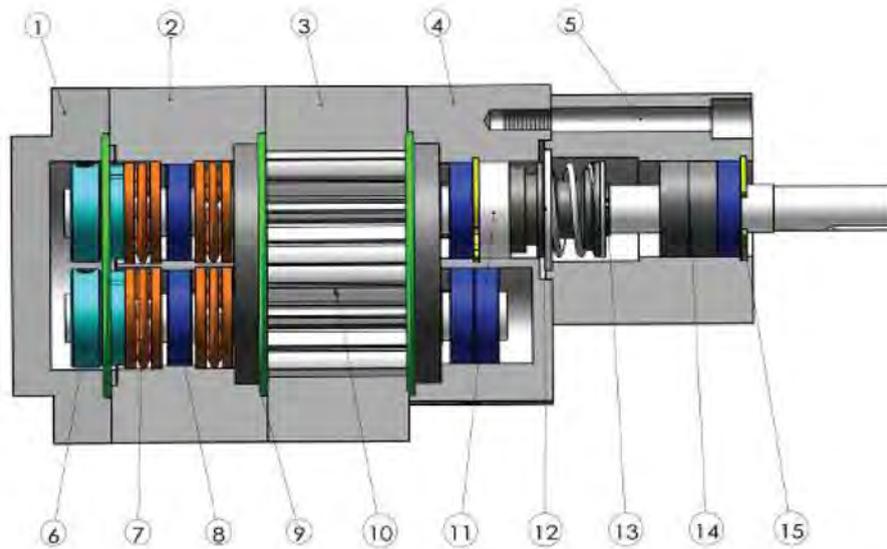


- 1. BOTTOM COVE
- 2. BEARING PUMP BODY
- 3. GEAR PUMP BODY
- 4. ROOF COVE
- 5. SEAL COVE

- 6. NUT
- 7. DRIVE SHAFT
- 8. PASSIVE AXIS
- 9. SIDE PANEL
- 10. GEAR

- 11. PTFE SLEEVE
- 12. MACHINE SEAL
- 13. AXIS FILE
- 14. OIL SEAL
- 15. HOLE FILE

PRODUCTION INSTRUCTIONS

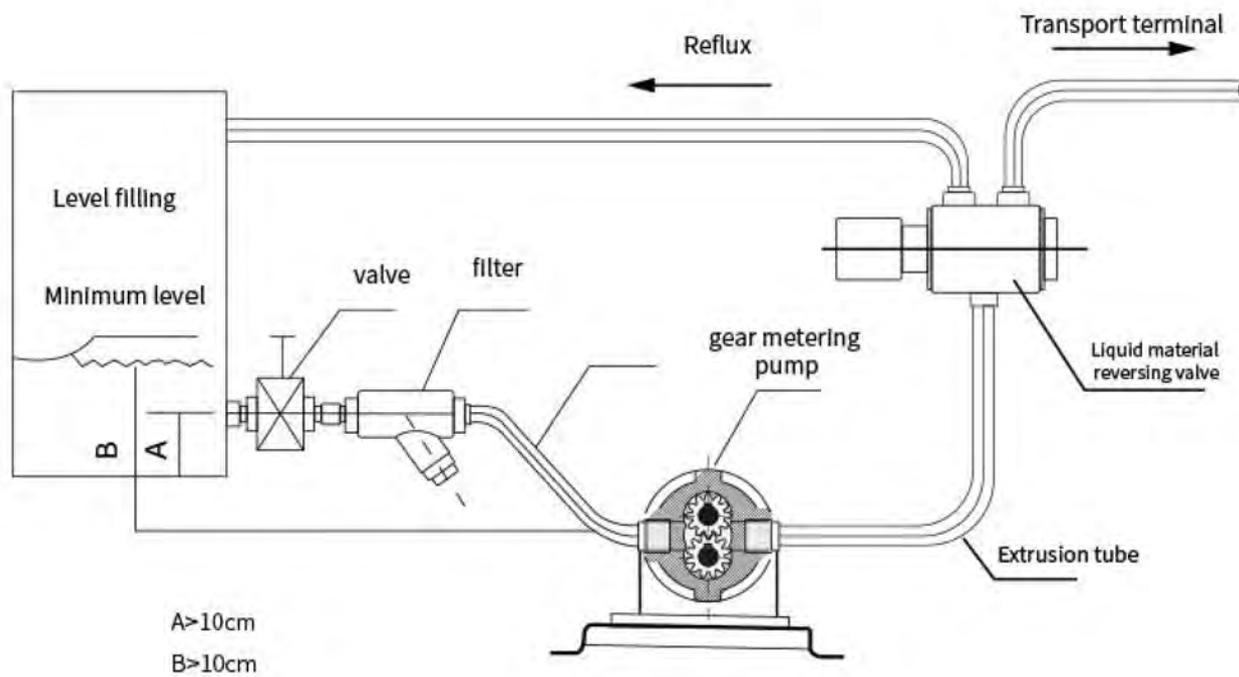

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: cxi@nt-rt.ru || сайт: <https://cixi.nt-rt.ru/>